

# STIL-FIT<sup>INT.</sup>

Instruction Manual

ERGOMETER PURE



we refine fitness

# Assembling the Cockpit

The STIL-FIT ergometer is delivered almost fully assembled. You only have to connect one cable, tighten one screw at the front post and assemble the handle bar.

## Step 1

Slip the wooden tube onto the front tube. Connect the cable. Pay attention to the arking. Check if the connection is fixed well. Then stick the unit into the frame.



Both parts are packed each in one box.

## Step 2

Assemble the handle bar. We recommend to align the handle bar parallel to the cockpit as shown in the picture.



### Step 3

Slide the wooden tube upwards. At the front you will see a hole with a headless screw inside. Use the Allen key and turn the tool clockwise firmly to fix the front tube in the frame.

**Never remove the screw. Pay attention that the front unit is aligned straight.**

Take the rubber grommet and stick it into the hole. Then slide the wooden tube downwards. The rubber grommet will keep the tube in position.

## Adjustment of the quick release

To adjust the quick release, open the lever and tighten the screw until the desired result is achieved. When the quick release is fastened the saddle should not turn. Attention: The saddle tube has a mark -max-. This indicates the maximum possible height of the saddle.



## Adjustment of the saddle

The saddle can be adjusted horizontally and vertically. To adjust the saddle, loose the screws at the bottom and adjust the angle. Fix the saddle at the desired position and tighten the screws again very strong.



## **Assembling of the transportation wheels**

The transportation wheels can be mounted optionally at the back of the frame.

## **Adjustable feet**

The STIL-FIT Ergometer comes with four adjustable feet to guarantee a firm stand.

## **Special equipment**

You can equip the Ergometer with different accessories. These components can be purchased from the bicycle retail market. Please note the following specifications.

### **Pedals**

all types with standard thread

### **Seat**

all standard types

### **Seat tube**

tube size 31,8 mm

## TRAININGS COMPUTER:

The Ergometer is controlled by a 4,3" touch screen monitor. The operation is very easy and self-explanatory. Start immediately with the quick start or register a user and select a program.

By starting to pedal the training computer is activated. It turns off automatically after your workout.

## PROGRAMS:

<b>Quick Start</b>	1-32 resistance levels
<b>Manuel</b>	1-32 resistance level with pre selection of time
<b>Beginner 1</b>	15 minutes, level 6-10
<b>Beginner 2</b>	30 minutes, level 6-10
<b>Advanced 1</b>	20 minutes, level 8-14
<b>Advanced 2</b>	30 minutes, level 10-14
<b>Advanced 3</b>	45 minutes, level 10-16
<b>Watt Constant</b>	Adjustable in steps of 5 Watt
<b>Cardio Fitness</b>	75% of the maximum pulse
<b>Cardio Fatburner</b>	65% of the maximum pulse

### Data storage:

The training computer stores data for up to five people.

### Pulse control


The pulse signal is transferred via BLuetooth smart. We recommend the heart rate sensor Verity Sense from Polar.


### Language

German, English, Spain and Frech are available.


# Training Screen

The user interface is self-explanatory and easy to use with a clearly arranged operator guidance system. Using the "Quick start" you start immediately with your workout. You can find our other preselected programs in the 'program selection'. The trainings computer gives you the opportunity to store the training-data for up to four users.



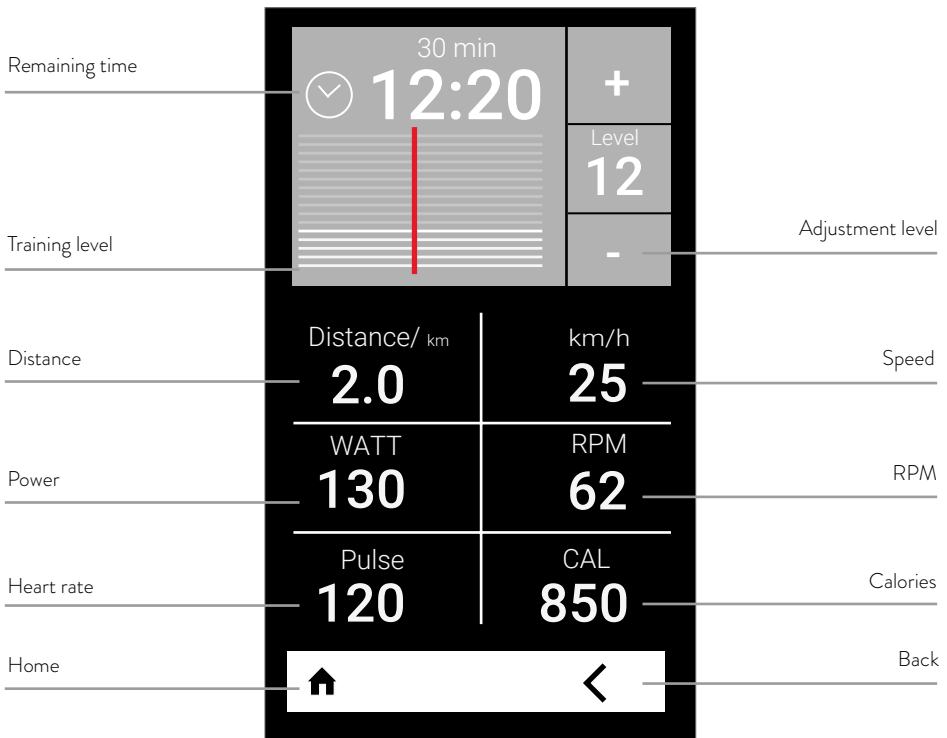


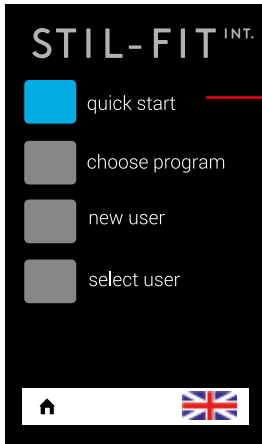



Start Screen

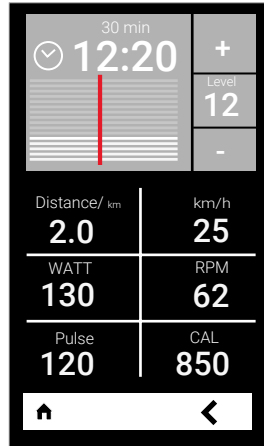




Quick Start allows you to start immediately with program Manual

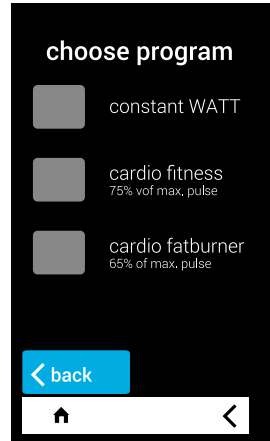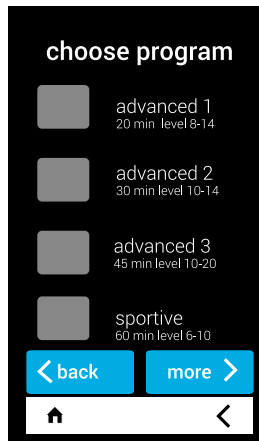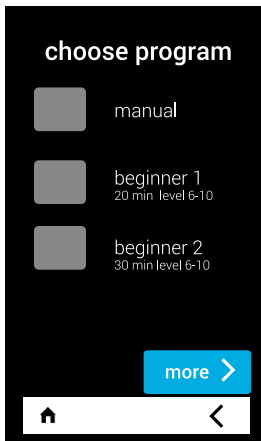

Screen: Program selection

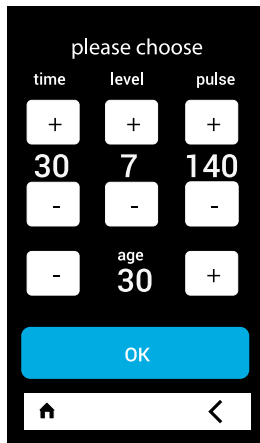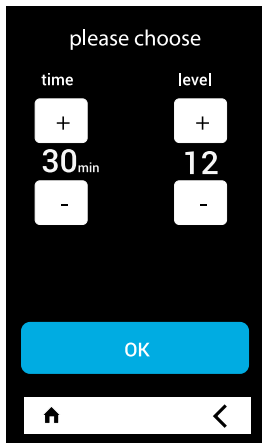

Screen: Pre-selection

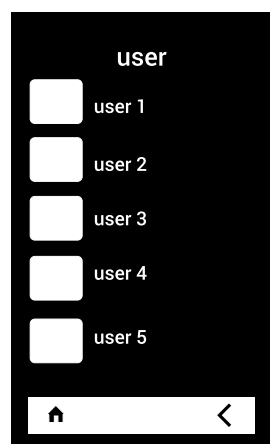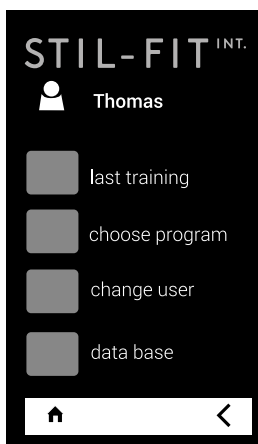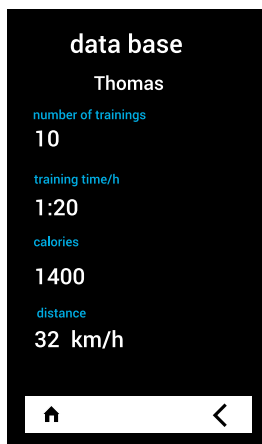

Screen: Data Base



## Technical Data

The ergometer has an induction brake system with a built in generator. There is no external power supply necessary. At the bottom of the housing there is a battery rack for 10 Mignon AA rechargeable cells. They keep the training computer activated in case you stop pedaling.

If you should not be using the Ergometer for a longer period of time the battery might be discharged.

Please use the enclosed power supply in order to recharge the battery. You will find the socket at the backside of the housing. If the batteries are defect they can be replaced. Unscrew the battery rack and replace the batteries.

### **Ergometer PURE**

Commercial induction brake system with built-in generator

50 - 400 watt

4,3" touch screen monitor

2 cardio programs

Manual mode - adjustable in 32 levels

Watt program - adjustable in steps of 5 watt

5 hill programs

POLAR pulse receiver Bluetooth smart

Data storage for 5 users

Languages: German, English

No external power supply necessary

Weight 38 kg

Transportation rollers - optional installation

L/W/H: 115 x 50 x 120 cm



# STIL-FIT Products

STIL-FIT Rower FLOW ONE



STIL-FIT AB Trainer



STIL-FIT BACK Stretch



STIL-FIT Fascia Roll



STIL-FIT Functional Trainer



STIL-FIT International GmbH  
Friedenstrasse 18A  
81671 München  
Germany

Tel: +49.89.13 93 60 40

Fax: +49.89.13 93 60 43

**[info@stil-fit.com](mailto:info@stil-fit.com)**

**[www.stil-fit.com](http://www.stil-fit.com)**